




GreenGrowRooms™

# Architecural Panel System

## Basic Installation Procedure 3 of 3

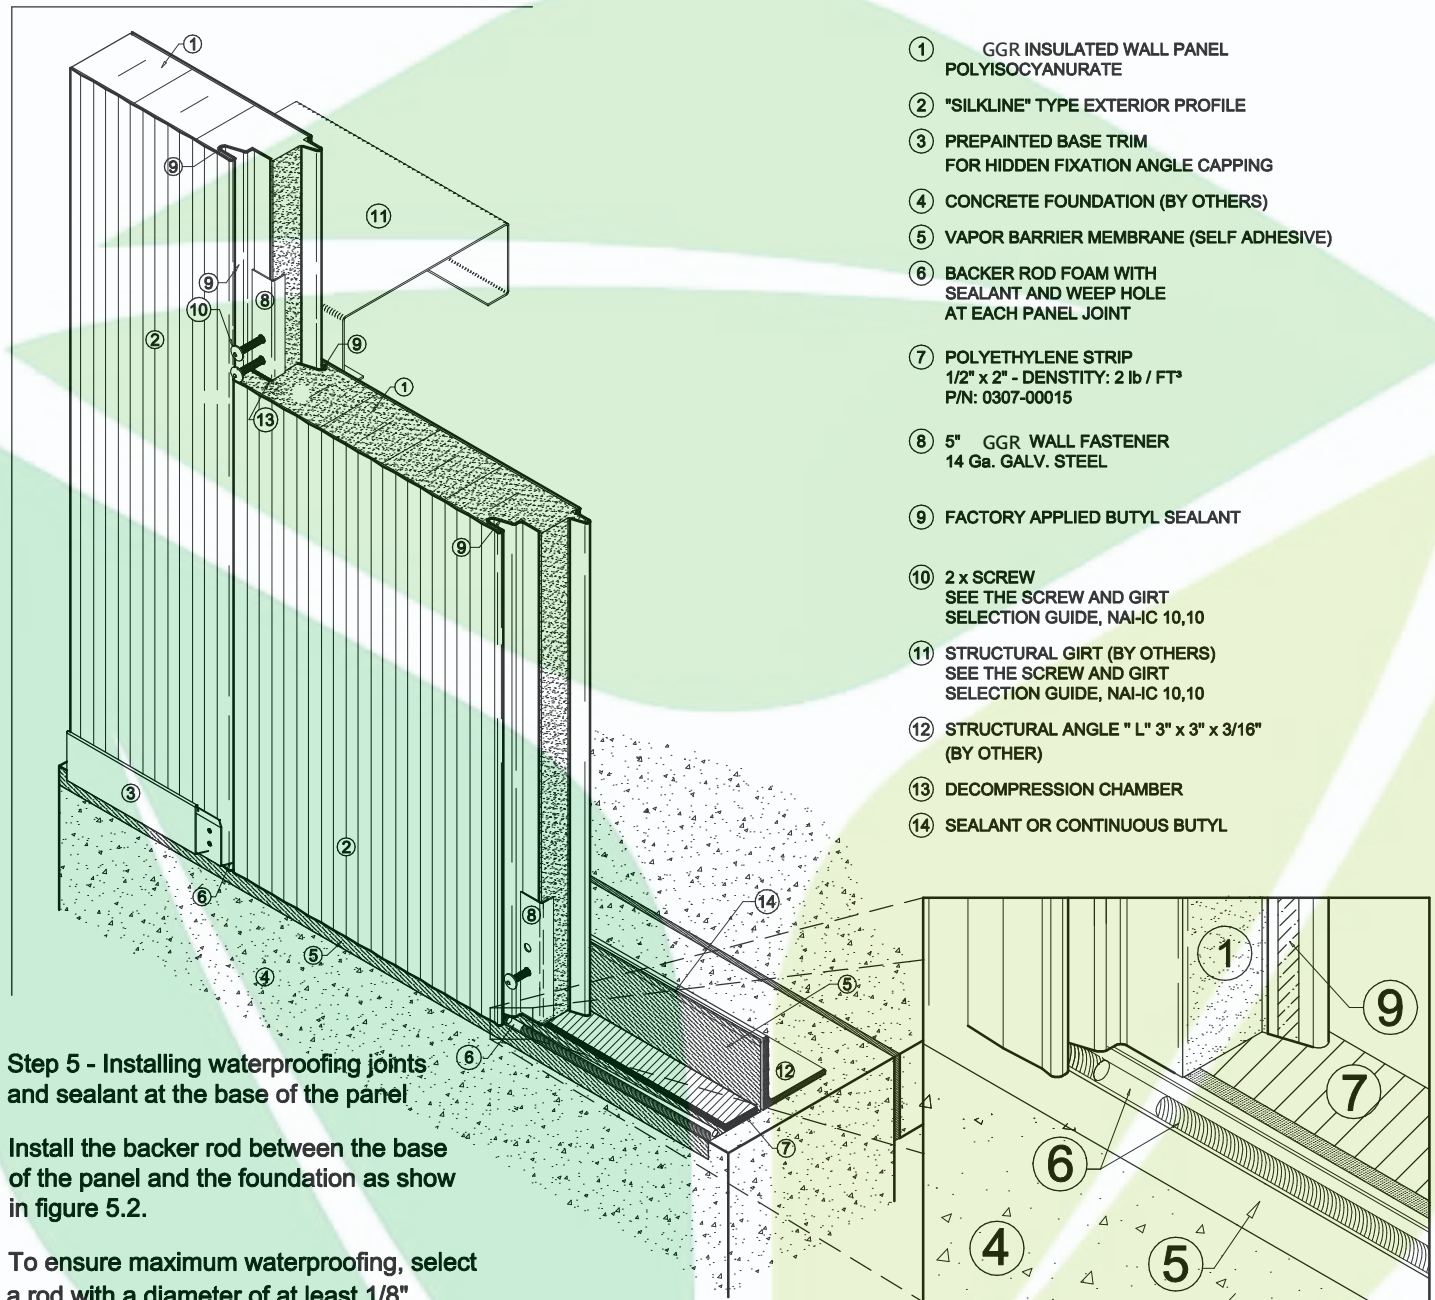

NOTE: ANY DESIGN CHANGE TO THE CLIP, THE JOINT, THE FASTENING METHOD OR THE INSULATION PROPERTIES MUST BE COMMUNICATED TO FM FOR APPROVAL.